

Realtek Bluetooth UART interface logging

File	Description
logmanUartTraceEnable.bat	No reboot required. Used to enable trace immediately after execution. trace will stopped automatically after system reboot.
logmanUartTraceDisable.bat	No reboot required. Used to disable trace immediately after execution.
autologUartTraceEnable.bat	Reboot required. Used to enable trace from next system boot. Trace will not stopped until autologUartTraceDisable.bat Is executed.
autologUartTraceDisable.bat	Reboot required. Used to disable trace from next system boot.

- use logmanXXX.bat for issues can be manual reproduced after system boot.
- use autologXXX.bat for issues during system boot. such as yellow bang after system reboot.
- all of the scripts requires administrator privilege.
- trace files are saved in \Desktop\RtkBtTraces, zip them and send back.